

Introduction

SCAMAX® document scanners are primarily used to digitize business documents and forms. Therefore, the standard calibrations of the devices are designed for the creation of compressed, clear color images, with the best possible qualitative conversion (*binarization*) into B/W images for subsequent processing, from a wide range of documents.


For some time now, the guidelines of international quality standards such as **ISO** (*International Organization for Standardization*) or **FADGI** (*Federal Agencies Digitization Guidelines Initiative*) have been used as assessment criteria for processing in the field of cultural assets (*archives, libraries, etc.*). Since these guidelines were developed for still image capturing by photo, reflected light or flatbed systems, it was previously considered unlikely that document scanners with rotating paper transport would be able to meet the necessary requirements.

Due to the excellent image quality of the cameras used and the precise transport system of the **SCAMAX®** document scanners, we are able to comply with the standard values of **ISO 19264-1 Level B** and **FADGI *****.

The following description contains all steps for the special calibration of the scanner and the determination of device-specific values to generate the necessary correction value tables.


1. Scanner Calibration

The following calibration should be accomplished by someone who has completed a technical training for this type of scanner, as access to the scanner's service menu is required beside a clean sheet of InoTec white balance paper (*Art.No. s9100002 - please do **not** use other kind of paper!*).

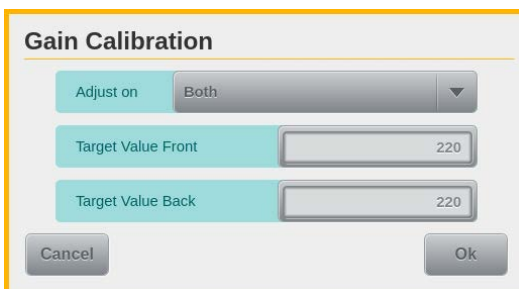

The first step is a Gain Calibration to a **Target Value** of **220** (*default is 250*). For this purpose, the value of the fields **Target Value Front/Back** in the corresponding mask of the **Gain Calibration** button in the menu *Service-> Calibration* is changed accordingly and, after inserting the white balance paper, the calibration is started with the button **OK**.

The last used target value will be stored in the scanner and thus also used in the future during a gain calibration performed via the similar button in the menu *Administration->Calibration*.

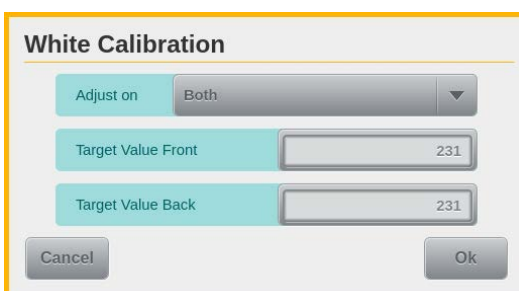

Also the White Calibration, as 2nd step of this calibration, is performed with a lower target value of **231** (*default is 260*). Like at the gain calibration, the value of the **Target Value Front/Back** fields is also changed here in the associated mask and saved for future calibrations from the areas *Service* and *Administration*. Then, as usual, perform the White Calibration with the paper provided for this purpose.


2. Creating a ICC/ICM color profile

After performing the special calibrations from the previous chapter, a color profile must be created for the scanner. If there is already a color management solution available which is able to create such color profiles for devices, it can of course be used. In the following sample we use parts of the OpenSource system *ArgyllCMS*. Those are provided with this description, as a zip-archive named **CreateICM**, including a batch file with the same name. It enables you to create so-called ICM profiles which are color profiles for Microsoft platforms. An IT8 card with associated reference file (*InoTec Part. No. s9100007*) is also required.

First the folder **CreateICM** has to be unpacked to the hard disk of the scan-PC (e.g. C:\CreateICM) from the Zip-archive mentioned above. Afterwards, scans in different input orientations must be performed from the IT8 card and saved as uncompressed color images in Tiff format. Here, we use our SCAMAX scan(+), but any other scan solution, that can receive and save uncompressed images, can also be used. The scanner should be turned on *several minutes* before scanning reference images so that it is already at *operating temperature*! In addition, the *Paper Passage Setting* in the scanner (see chapter 5.4.2 in the User Manual) should be turned to the smallest value



At the *Image Presettings* in the scan profile, the **Image Adjustment** must be enabled...

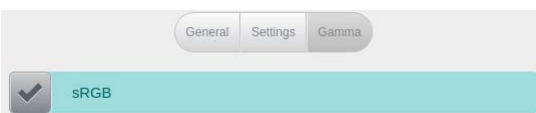

...and the option **sRGB** must be selected in the corresponding settings mask *Gamma*.



The same *Main Resolution* (here 300 dpi) must be selected, which will also be used in production



At the *Front Side Settings* the **Color** image must be marked...



...and the *Compression* must be changed to **24Bit uncompressed**, in the mask with the same name.





For the sake of simplicity **ISO A4** should be chosen at the *Format Selection* in the corresponding mask *Paper Format*.

In order to protect the test originals (*IT8 card, etc.*) that are still to be scanned, from now on the *Feeder Mode* should be switched to **Manual** and the *Separation* should be **deactivated** via the scan profile or the corresponding function keys in the scanner's scan screen.




Test originals should be ejected to the rear output tray by setting the corresponding option to *Current Output to Rear at* **Every Scanned Sheet** in the *Output* mask.

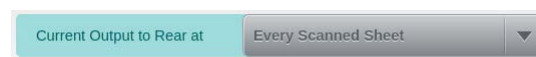


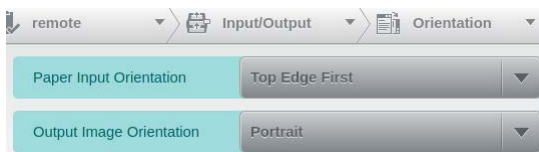

In the *Orientation* mask at the same sub menu, the *Paper Input Orientation* must be set to **Top Edge First** while the *Output Image Orientation* stays at **Portrait**.

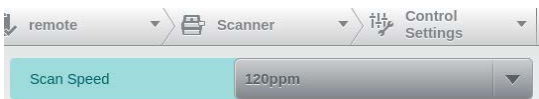


Using the setting screen *Operation* at the menu *Scanner* or the corresponding function key in the scanner's scan screen, the *Scan Speed* should be set to **120 ppm** or (with *Slow Mode Option*) even slower.

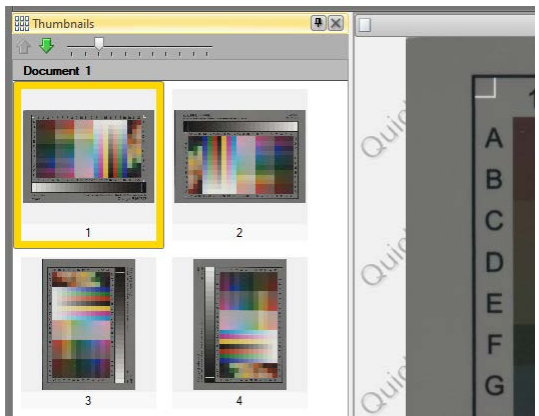


With these settings, the IT8 card must be scanned once per input direction (*top, bottom, left, right*). Please make sure that the card is pulled in as straight as possible. The scanning solution should now contain four images of the IT8 card in different orientations (figure left).

When using SCAMAX scan, the four images can now be saved via *File->Save As* or *CTRL-S*.

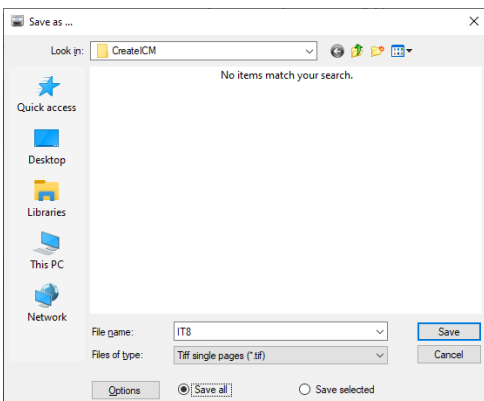

In the corresponding dialog, the previously created directory (e.g. *C:\Create/CM*) must be selected as target path and *IT8* as file name. **Tiff single pages** has to be selected as *File type* and *Color* must be set to **Uncompressed** via at the button *Options*. If the option **Save all** is marked, the files *IT8-1.tif* to *IT8-4.tif* are automatically created in the target directory pushing the **Save** button. If another scanning solution is used, it must be ensured, that finally four uncompressed color images in Tiff-format with the same name like above are located in the mentioned destination path.

In order to create a color profile, based on the scanned IT8 images, the corresponding reference file of the IT8 card must first be copied into the same directory like the images and renamed to **IT8-R.txt**. This text file is generally named like the charge number of the IT8 card (e.g. *R160727.txt*) and located on the supplied data carrier or can be downloaded from the manufacturer's website ([here www.coloraid.de](http://www.coloraid.de)). If all required files are available in the target directory, the batch file **Create/CM.bat** can be started and, after selecting the

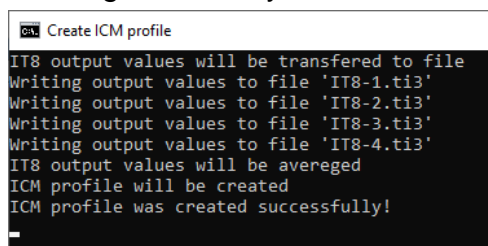


language and entering the desired profile name (e.g. *scanner serial number*), the various steps to create the ICM profile are performed and logged in the associated command window. When finished, the window is automatically closed and a new color profile with the previously entered name and the extension **.icm** is located in the target directory. If double-sided scanning

should be possible while keeping the desired quality guideline, this last step must be carried out again, based on four uncompressed color images created with the rear side camera.


3. Creation of Correction Value Tables

Within the next step a correction value table is generated, which is calculated based on measured values and loaded onto the scanner as a so-called *Camera Curve*.

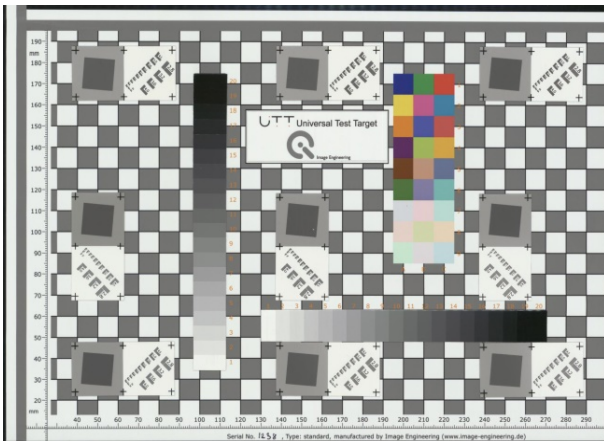


In order to determine the required measuring values, first the target of the used image analysis software must be scanned and the color profile created must be assigned. We refer to the **Universal Test Target TE-262** (abbreviated **UTT** - figure left) from *Image Engineering* in A4 format. If required, this target incl. the corresponding reference file (*Excel format*) and the also used image analysis software **iQ-Analyzer** can be obtained directly from the manufacturer. The targets must be handled with care, because only a clean target will give correct values.

For scanning we use the free imaging software **GIMP**, which is also able to determine values of the so-called Lab color space from the target image. Via File->Create->Scanner/Camera leads to the selection of the source and from there to the driver dialog of the scanner. The same scan settings are used as for the images of the IT8 card

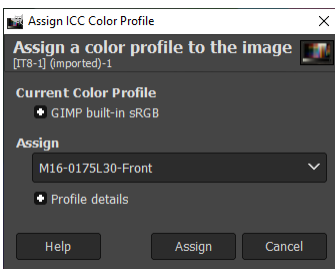


([Chapter 2](#)). However, this time **Maximum Scan Area** must be selected as *Paper Format*, because the UTT target is scanned in landscape mode. By closing the driver dialog with **OK**, the scan process is started. Also while scanning this target, it has to be ensured that it is drawn in as straight as possible. Via the menu item *Image->Color Management* the previously created color profile is then assigned to the image in a corresponding dialog (see left).

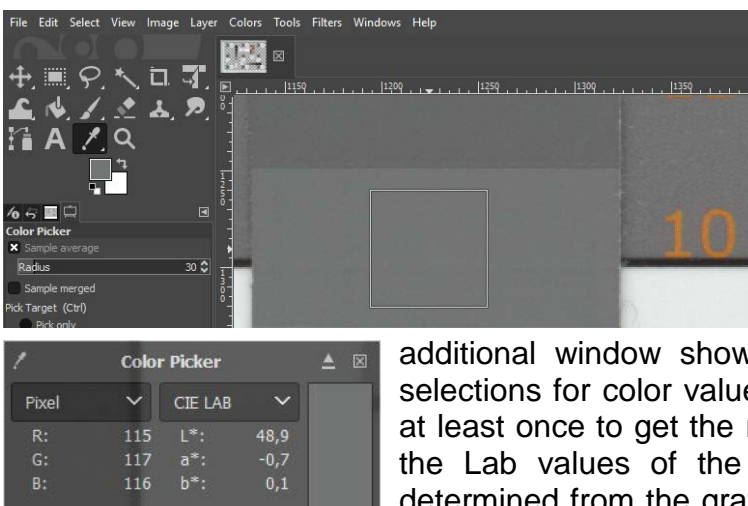

Now the mean values for **L*a*b*** can be output from a pre-defined sampling area by using the *Color Picker* function. We recommend to choose an area size that covers at least 70% of one gray field's height. As soon as the activated Color Picker is clicked into the loaded image for the first time, the


additional window shown on the left appears, offering two selections for color values, where **CIE LAB** must be selected at least once to get the required values. Using these settings, the Lab values of the grayscale levels 1 to 19 must be determined from the grayscale wedge, which runs from top to bottom on the left side from the target. The sampling area should always be placed in the gray fields as centred as possible.

These values are required for the Excel workbook *TonalCorrection-UTT-Lab*, which is provided with this description and consists of four tables. At the table *Sample Input*, the

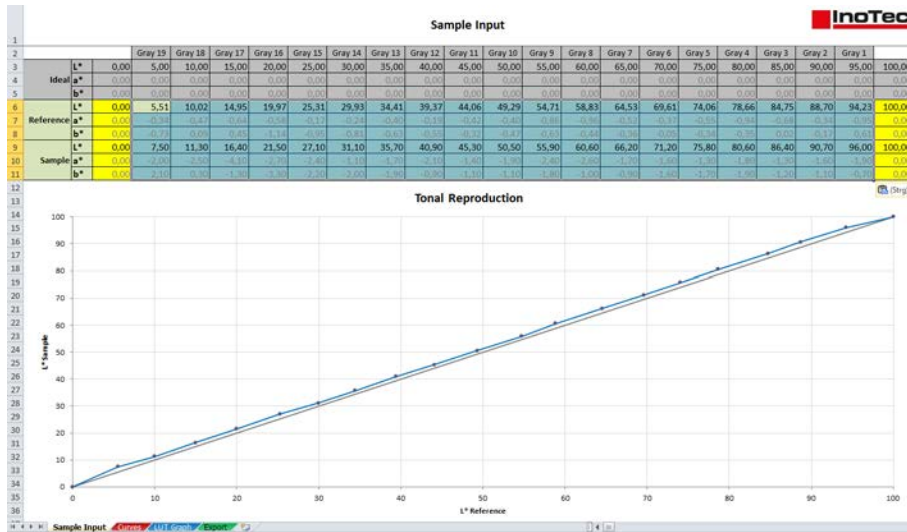


reference values from **Gray 19 (dark gray)** to **Gray 1 (white)** of the UTT target must be entered in the lines **6 - 8**. This means the values $L^*a^*b^*$, which can be found in columns **E - G**, of the lines **GS_R_1** to **GS_R_19**, of the target's reference file. Into lines **9 - 11** of the *Sample* section, the values determined with **GIMP** have to be entered. The

graph below the input area shows the tonal deviation of reference and measurement from the theoretical ideal line. After entering the two ranges of values, the workbook should be saved under a new name in order to avoid having to re-enter the values for further tests.

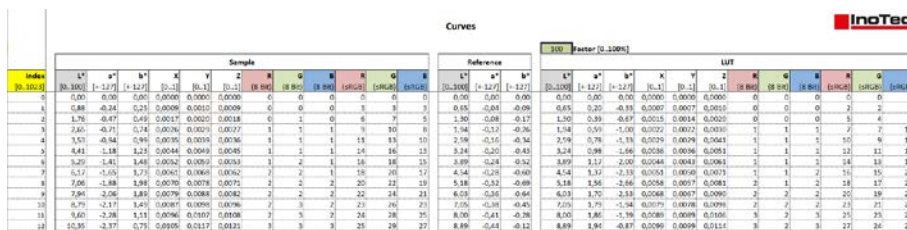


The second spreadsheet *Curves*, contains calculation fields in different blocks, which finally lead to a linear correction table for the scanner. The input field *Factor*, which is preset with the value **100**, should **not** be changed, as otherwise correction values might be determined which possibly lead to a non-compliance with the quality specifications. In the table *LUT Graph*, the

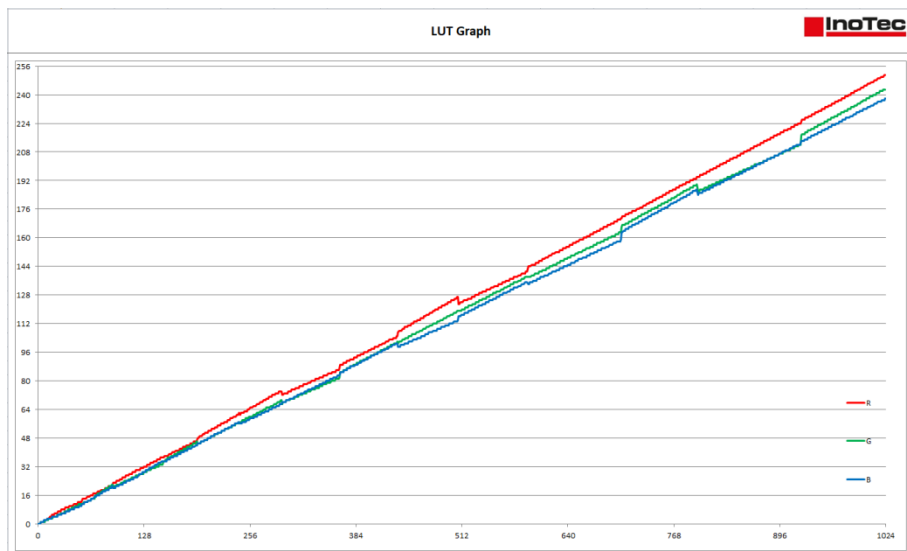

The input field *Factor*, which is preset with the value **100**, should **not** be changed, as otherwise correction values might be determined which possibly lead to a non-compliance with the quality specifications. In the table *LUT Graph*, the colour gradient of the 1024 correction values per colour channel is graphically illustrated.

The last table *Export* contains the correction values which must be saved as a CSV file for further use. For that, you have to switch to this table to make it the "active" one. Pressing the **F12** key, the *Save As* dialog opens, in which the desired path is to be selected and as a file name for correction values the term **lut_front.csv** is to be entered for the front side or **lut_back.csv** for the rear side. **CSV (MS-DOS)** must be selected as type. The two messages which are displayed during the following saving process must be confirmed with **OK** and **Yes**. Afterwards the workbook should be closed without saving it again.

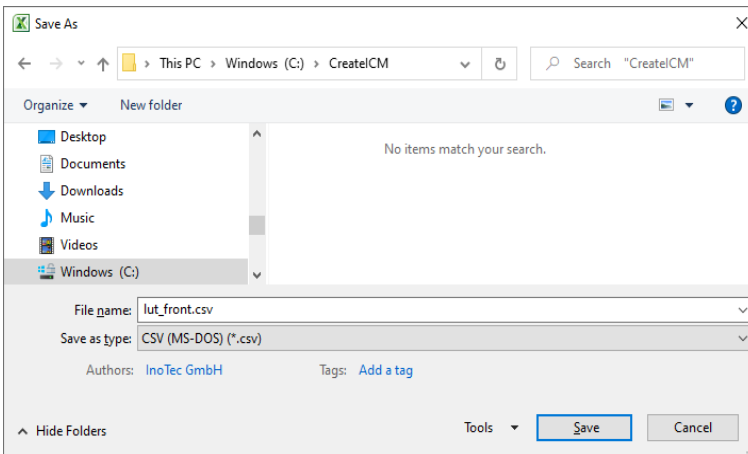

The last table *Export* contains the correction values which must be saved as a CSV file for further use. For that, you have to switch to this table to make it the "active" one. Pressing the **F12** key, the *Save As* dialog opens, in which the desired path is to be selected and as a file name for correction values the term **lut_front.csv** is to be entered for the front side or **lut_back.csv** for the rear side. **CSV (MS-DOS)** must be selected as type. The two messages which are displayed during the following saving process must be confirmed with **OK** and **Yes**. Afterwards the workbook should be closed without saving it again.


To use the created CSV file **lut_front.csv** as a *Camera Curve* on the scanner, first it has to be copied to the root directory of a USB stick. If a CSV file named **lut_back.csv** was created for the rear camera for double-sided scanning in compliance with the quality guideline, this file must also be copied to the stick. After the USB stick is connected to the scanner, switch to the *Export/Import - Updates* screen in the menu *Service* on the scanner display and select the button **Cam Curves Import** to transfer the correction values.



4. Checking the Effectivity via IQ-Analyzer

In the final step, it must be checked whether the previously performed scanner calibration, in conjunction with the color profile and the correction values of the LUT, is sufficient to meet the requirements of ISO 19264-1 Level B. The already mentioned image analysis software **iQ-Analyzer** is used for this purpose.


For this check, an uncompressed color image must be created from the UTT target again, as already described at the beginning of **Chapter 3**. But this time using the correction values created and transferred to the scanner in the same chapter. This is achieved by **enabling** the option *Image Optimization* in the mask *General* of the activated **Image Adjustment**, at the scan profile's *Image Presettings* and **disabling** the option **sRGB** in the *Gamma* settings mask again instead. After assigning the color profile created in **Chapter 2**, the image is saved (*exported*) to Tiff format.

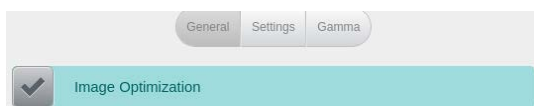


For this check, an uncompressed color image must be created from the UTT target again, as already described at the beginning of **Chapter 3**. But this time using the correction values created and transferred to the scanner in the same chapter. This is achieved by **enabling** the option *Image Optimization* in the mask *General* of the activated **Image Adjustment**, at the scan profile's *Image Presettings* and **disabling** the option **sRGB** in the *Gamma* settings mask again instead. After assigning the color profile created in **Chapter 2**, the image is saved (*exported*) to Tiff format.


Furthermore, the reference file of the UTT target must be copied manually to *c:\Program-Data\Image Engineering\iQ-Analyzer V6.2.2.1\Data* (version may differ). Before doing so, it is essential to check that the lines 56/57 of the reference file do not look like the one shown on the right. If this is the case, the line 56 has to be deleted so that line 57 moves up, otherwise errors will occur in the subsequent image analysis of the iQ-Analyzer.

	A	B	C
56	Grey Patches	Reference Values	
57	left vertical grey scale	L*	a*

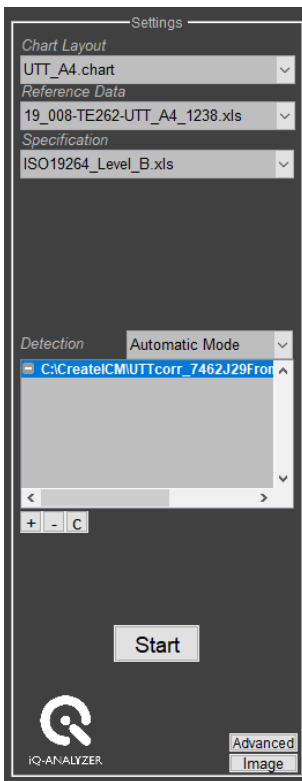


After starting **iQ-Analyzer**, a drop-down list in the upper left corner will only appear, when the  button (top right) is pushed. Selecting **UTT** there, the contents of the application screen will change completely and the section **Settings** will appear on the left side. First choose **UTT_A4.chart** as **Chart Layout** and select the previously copied reference file at the **Reference Data** section below that. For **Specification**, **ISO19264_Level_B** is the item to be used. Below **Detection**, which should remain in **Automatic Mode**, the last image of the UTT target can be entered using the small **+** button. If an image for the rear camera of the scanner was also created, it can be added to be analyzed together with the front camera image. The IQ Analyzer automatically uses the attached color profile to analyze the target image. However, this can also be controlled manually via the **Advanced** button in the lower right corner of the area.

Pushing the **Start** button the image analysis is initiated. At the same time a status bar appears in the upper right corner. The occurring warning regarding a "Dynamic Range" can be ignored.

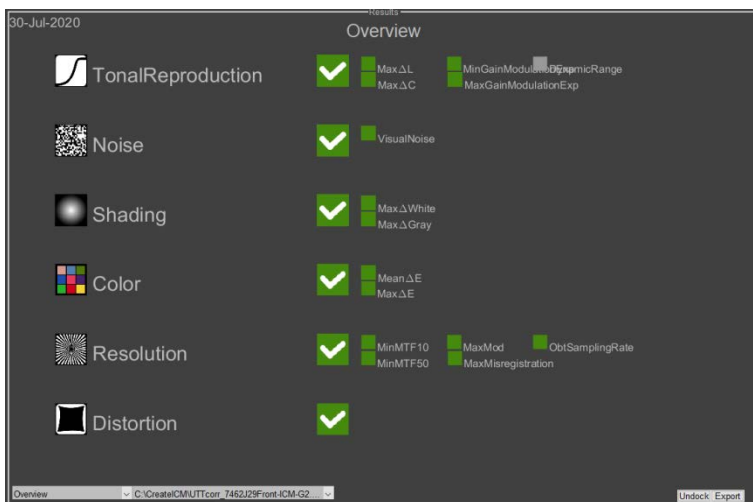

Once the image analysis has been completed, an **Overview** appears in the main screen of the application, ideally showing green checkmarks in all six checked points (figure left). This means that the points have been passed the tests of the selected specification. If one or more points show a red cross here, the specification were not met in the corresponding kind of test.


At the lower edge of the application screen, a numerical summary and the individual test areas can be opened as detailed views via a drop-down list, in order to correctly evaluate individual deviations.

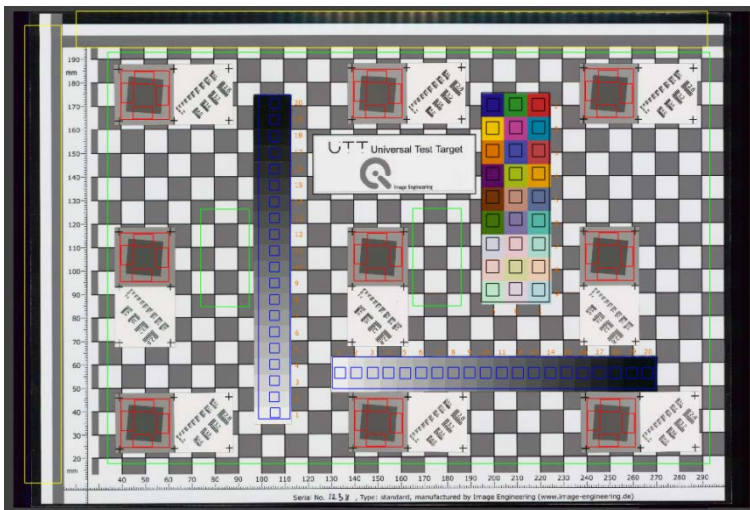

If not all points have been passed, first check if the analysis fields have been placed correctly on the image of the target. This can be done with the button *Image* (right bottom edge at *Settings* area), which switches from the *Overview* to the display of the target image with entered fields (called *patches* - see left). If there are significant divergences, either the scan of the UTT target should be repeated or the *Detection* can be changed to **Manual Mode**. The further procedure for adjusting the

patches can be found in the description of iQ-Analyzer.

5. Improvements

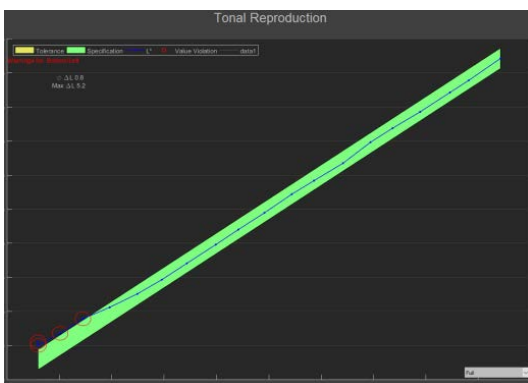


Patch		16	17	18	19
L* ref		19.58	14.47	10.10	5.94
L* sample		21.21	17.82	13.56	10.02
delta L	is	1.63	3.35	3.46	4.08
	spec_Max	3.00	3.00	3.00	3.00

Test series have shown that level B of the ISO 19264-1 standard is sometimes not achieved at the first attempt, since the *Tonal Reproduction* limits are not met for very light or very dark shades of gray (*patches 1-3 or 17-19*). The corresponding result window of the IQ-Analyzer and the extract of the window *Numerical* shows, that the delta L exceeds the permissible limit value of 3 for the patches 17-19. This can be prevented by manually adjusting the measured L^* values of these patches in **line 9** of the table **Sample Input**. The change of the corresponding L^* values must be in the **same** direction as the deviation. Thus, if the values are exceeded, like in the figure, they must be raised, and if they are fallen short of, they must be lowered.

To get a feel for the effect, we recommend starting with a change in the amount of 1.0. A CSV file must be created again from the Excel worksheet and loaded onto the scanner (see *end of Chapter 3*). Finally, carry out the steps from this **Chapter 4** again.

In addition to Tonal Reproduction, *White Balance* compliance may also fail. This can occur directly or as an interaction of an adjustment of the values for the Tonal Reproduction.

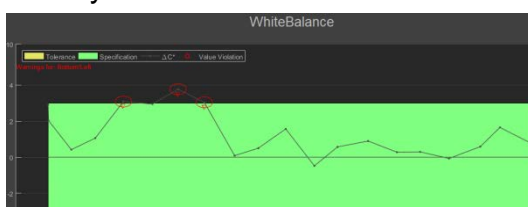

Patch		13	14	15	16
delta C	is	3.04	3.77	2.95	3.08
	spec_Max	3.00	3.00	3.00	3.00

However, errors at the White Balance are corrected by adjusting the values of a^* or b^* . The White Balance section and the extract of the window *Numerical* shows, that the delta C almost or completely exceeds the permissible limit value of 3 for patches 13-16. To determine the reason for the deviation, the values a^* and b^* of the relevant patches must be determined again from the reference image that was analyzed with IQ Analyzer (see **Chapter 3**).


These values must be compared with the reference values of the corresponding patches in **line 7/8** of the table **Sample Input**.

In case of a significant deviation, the associated sample value must be adjusted in the reverse procedure. If the measured value is higher than the reference value, the corresponding sample value in **line 11** of the table **Sample Input** is also *increased* to compensate the deviation. If the measured value is below the reference value, the corresponding sample value must be *reduced*. Please note here that **a*** and **b*** can also contain negative values. In such cases a measured value of **-1.5** isn't *higher* than a reference value of **-0.5**, but *lower*. The corresponding sample value must therefore be **reduced**.

Since the values of **a*** and **b*** represent a coordinate in a three-dimensional color space, the effect of a deviation is influenced by the respective other value. If one of the measured values is very close to the corresponding reference value, the deviation of the other value does not have as strong an effect as if both values deviate significantly. Therefore, it may be necessary and useful to adjust both values in such a case. Furthermore, it is recommended to check the values of the adjacent patches, since an alignment of the values also affects these patches.

After adjusting the sample values in **line 11** of the table **Sample Input**, a CSV file has to be created again from the Excel worksheet and loaded onto the scanner (see *end of Chapter 3*). Finally, carry out the steps from this **Chapter 4** again.

If deviations occur in the *Color* test range, it should first be checked whether the correct color profile was assigned to the reference image. This can be done by reloading the image in GIMP, since the attached profile is pointed out during loading and a processing option is offered. If the profile has already been processed with the image, make sure that an *Absolute colorimetric* has been selected and the *Black Point Compensation* has been disabled. In case of doubt, the test (**Chapter 4**) should be repeated with a newly created reference image. If the listed reasons can be ruled out as causes, the creation of a new color profile (**Chapter 2**) should be considered. Therefore it must be checked that the IT8 card used is not too old and that the appropriate reference file is used. In connection with a new color profile, **Chapter 3** and **Chapter 4** must be performed again.

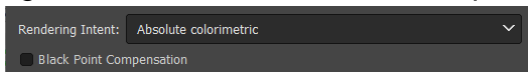

In case of doubt or for further assistance, please contact our support.